

Fabric Print Installation Guide

Illuminated displays (SEG13, SEG23, SEG33, SEG43)




Step 1

Position silicone edge so it is facing towards the assembled frame



Step 2

Fold in silicone edge so the fabric is covering the silicone

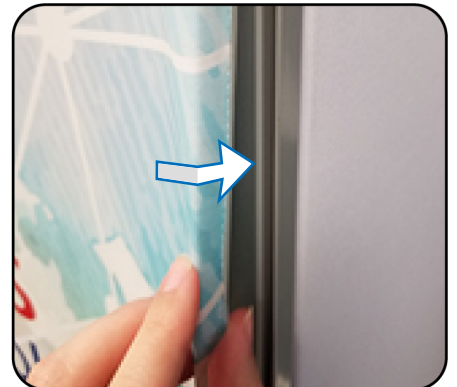

Step 3

Insert folded edge into crevice of frame, repeat process for entire edge of print.



Note: If the silicone edge is inserted without the fabric folded on top, the print will become loose and fall out.